


Universal Remote Control GDI-HOTEL

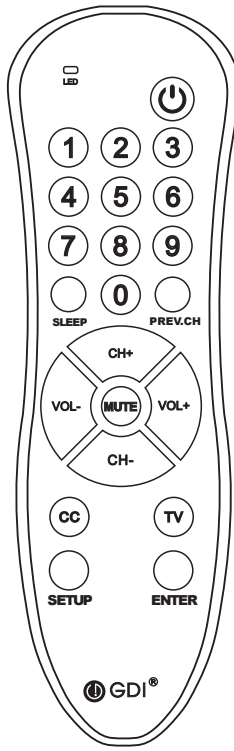


Overview

GDI-HOTEL Remote control is the newly designed TV universal remote for Hotel, you can program your Remote Control to operate most models and brands of infrared remote-controlled TV's in the world, including the most updated codes for Flat Screen TV.

Battery Installation and Information

The GDI-HOTEL remote control requires two AA Batteries. To install the batteries

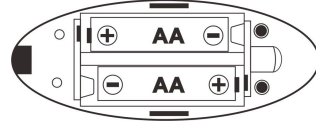

1. Remove the battery cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.
3. Press and push the battery cover back into the place.

Caution:

If you do not plan to use the remote for an extended period, remove the batteries. They may leak chemicals that can destroy electronic parts.

Programming Device

» **Default Setting**
TV LG

» Direct Code Entry

1. Turn on the device TV to be programmed.
2. Find out the 4 digital numbers from the code list which is corresponded with your device.
3. Press & hold SETUP button for 3 seconds till the LED light off, release all keys and LED light up.
4. Input the 4 digital numbers you choose from the code list. When you input every digital number, the LED will flash one time.
5. The LED will light off directly to exit the setting mode if correct digital number you input.
6. If wrong code inputted, the LED will flash quickly 3 times and then exit the setting mode. Repeat step 2-4 if wrong code input.
7. After inputting the codes, please test the remote working status on the device. If device is not controllable, please choose other 4 digital codes from the code list & repeat step 2-4 to make sure your remote workable.
8. Write down the 4 digital code for future reference.

Note: If not keys pressed in 30 seconds, the LED will light off to exit the setting mode.

» Auto Searching Entry

If you could not find the correct 4 digital number after many times of code inputting, please use auto searching to locate the correct one:

1. Turn on the device to be programmed.
2. Press & hold SETUP button for 3 seconds till the LED light off, release all keys and LED light up.
3. Aim the remote to the device, press & hold MUTE button with releasing.
4. When the signal of MUTE appear on the TV screen, release the MUTE button & exit the setting mode.
5. Please test function keys under device working or not. If working no properly, please repeat step 2 – 4 to locate the correct codes.

Note: If not keys pressed in 30 seconds, the LED will light off to exit the setting mode.

Code List

Accurian	1219
Action	1072
Admiral	1010,1019,1337
Advent	1037,1043,1051,1052,1244
Aiko	1009
Aiwa	1143
Akai	1001,1025,1030,1039,1048,1103,1188,1189,1192,1246,1264,1283
Albatron	1029,1057
America Action	1015
Anam	1015
AOC	1001,1092,1144,1267,1271,1307,1314
Aomni	1177
Apex Digital	1036,1039,1041,1077,1082,1105,1261,1306
Astar	1163,1197
Audiovox	1009,1015,1018,1022,1045,1059,1073,1117,1166,1212,1219,1226,1228,1247,1253,1254,1320
Aventura	1013
Axion	1247
Bell & Howell	1012
BenQ	1085,1127
Bradford	1015
Brilliant	1083
Broksonic	1016,1019,1232,1234,1242,1246,1248
Byd:sign	1125
C & M	1029
Candle	1001
Carnivale	1001
Carver	1083
Casio	1102
CCE	1022
Celebrity	1108
Celera	1039
Champion	1143
Changhong	1039
Citizen	1001,1003,1008,1009,1186,1187,1241,1246,
Clarion	1015

Coby	1164,1179,1289,1291,1292,1293,1295,1296,1297,1298,1299,1300,1301,1302,1321
Commercial Solutions	1004,1311
Contec	1015
Craig	1015
Crosley	1083,1108,
Crown	1003,1015,
CTX	1029
Curtis	1100,1129,1303,1313
CurtisMathes	1001,1003,1004,1008,1010,1011,1012,1018,1020,1022,1026,1030,1083,1137,1257
CXC	1015
Cytron	1129
Daewoo	1003,1009,1012,1018,1022,1024,1025,1241
Dell	1014,1090,1114,1224
Delta	1145
Denon	1011
Diamond Vision	1263
Digistar	1167
Digital Lifestyles	1209
Disney	1184,1278
Dumont	1001
Durabrand	1013,1014,1015,1019,1086,1184,
Dynex	1154,1215,1221
Electroband	1108
Electrograph	1177,1203
Electrohome	1019,1185,1187
Element	1160,1229,1304
Emerson	1003,1012,1013,1014,1015,1016,1018,1019,1022,1146,1184,1225,1229,1232,1234,1241, 242,1259,1263,1279
Emprex	1151,1209
Encross	1074
Envision	1001,1049,1144,1267,1271,1314,
Epson	1094
ESA	1013,1048,1259
Fisher	1012,1143,1339
Fluid	1327
Fujitsu	1027,1046,1061
Funai	1013,1015,1108,1115,1231,1259,

Futuretech	1015
Gateway	1203,1204
GE	1004,1006,1014,1018,1039,1137,1165,1233,1235,1311,1330
GFM	1013,1184,1225,1229,1259,1279
Gibral	1001
Go Video	1079,1197
GoldStar	1001,1003,1014,1239
Grundig	1027
Grunpy	1015
Haie	1042,1086,1202,1288,1290,1315
Hallmark	1014
Hanns.G	1214
Hannspree	1138,1139,1200,1214
Harley Davidson	1231
Harman/Kardon	1083
Harvard	1015
Havermy	1010
Helios	1067
Hello Kitty	1018
Hewlett Packard	1091,1092,1093,1157
Hisense	1036,1126,1183,1273,1304,1308
Hitach	1003,1011,1026,1044,1091,1092,1093,1097,1136,1231,1335
HP	1157
Hyundai	1092,1106,1121
I-Inc	1201
iLo	1118,1146,1154,1175,1184,1190,1260
Ininity	1083
Initial	1175,1260
Insignia	1013,1019,1101,1129,1158,1166,1180,1183,1215,1221,1230,1259,1264,1272,1290,1310,1325,
Inteq	1001
IX	1075
JBL	1083
JCB	1108
JCM	1285
Jensen	1037,1051,1052,1123,1129,1244
JVC	1004,1019,1023,1035,1110,1236,1286,
KDS	1160
KEC	1015

Kenwood	1001
KLH	1039,1041
Konka	1033,1264
Kost	1113,1156
Kreisen	1074
KTV	1001,1003,1015,
LG	1000,1001,1014,1029,1064,1211,1245,1262,1290,1336,1309,1311
LiteOn	1091
Lloyd's	1231
Luce	1084
LXI	1004,1014,1012,1054,1083
MAG	1160
Magnasonic	1241
Magnavox	1001,1004,1013,1045,1083,1085,1099,1111,1144,1152,1162,1203,1227,1231,1243,1259,1260,1305,1322,1329
Magnin	1233
Marantz	1001,1062,1063,1083,1084,1147,1152,1195,1312
Matsushita	1017,1023
Maxent	1038,1104,1195,1203,1205
MB Quart	1228
Megapower	1029
Megatron	1011,1014
Memorex	1012,1014,1019,1075,1109,1184,1185,1215,1230,1234,1237,1239,1240,1248
MGA	1001,1109,1014,1233
Midland	1001,1003,1004,1006,
Mintek	1175,1260
Mitsubishi	1010,1014,1056,1109,1217,1331
Monivision	1029,1057
Motorola	1010
MTC	1001,1008
Multitech	1015
NAD	1014,1054,1068,1098
Nakamichi	1493
Naxa	1274
NEC	1001,1074,1084,1147,1217
NetTV	1038,1203
Nexus Electronics	1304
Nikko	1001,1009,1014

Niko	1172
Norcent	1036,1055,1092,1144,1171,1172,1200,1314
Norwood Micro	1118,1122
NTC	1009
NuVision	1182
Olevia	1000,1096,1133,1176,
Onwa	1015
Optimus	1017,1023,1026,1237,1240
Optoma	1090,1138
Optonica	1010
Orion	1016,1019,1154,1232,1234,1242,1248
Panasonic	1004,1017,1023,1115,1120,1155,1237,1240,1249,1251,1252,1334
PARK	1274
Penney	1001,1003,1004,1008,1014,1054,1137,1233,1239
Petters	1160
Philco	1001,1013,1083,1115,1146,1184,1259
Philips	1013,1028,1083,1146,1152,1156,1199,1220,1227,1258,1305,1322,1001,1003,1329
Pilot	1026,1068,1147,1153
Pioneer	1119,1314
Planar	1039,1160,1067,1113,1117,1118,1126,1128,1129,1130,1131,1134,1160,1164,1167,1207,1208,1210,1212,1261,1264,1268,1766,1275
Polaroid	1003,1009,1018,1022
Portland	1037,1043,1051,1052,1202,1215,1244
Princeton	1029,1086
Prism	1004
Proscan	1001,1004,1020,1137,1235,1277,1285,1304,1311,1330
Proton	1014,1020
Proview	1160
Pulsa	1001
Pyle	1100,1282
Quasar	1004,1017,1023,1120,1237,1240
Nexus Electronics	1304
RadioShack	1001,1003,1004,1012,1014,1015,1231

RCA	1004,1010,1022,1026,1091,1108,1137,1165,1213,1233,1235,1255,1256,1257,1264,1280,1284,1311,1324,1326,1330
Realistic	1001,1003,1012,1014,1015
RevolutionHD	1177
Runco	1001,1147
Sampo	1001,1003,1038,1203
Samsung	1001,1003,1008,1014,1021,1023,1030,1048,1050,1168,1087,1092,1257,1332
Samsux	1003
Sansui	1013,1019,1149,1154,1185,1230,1231,1234,1242,1246,1248
Sanyo	1012,1083,1095,1143,1233,1339
Sceptre	1076,1105,1141,1173,1294,1319
Scotch	1014
Scott	1014,1015,1016,1193
Sears	1004,1012,1013,1014,1054,1083,1231,1239
Seleco	1139
Sense	1226
Sharp	1003,1010,1053,1062,1174,1307,1316,1337
ShengChia	1010
Sherwood	1148
Signature	1083
Signet	1113
Skyworth	1218
Sole	1084,1156,1177,1270
Sony	091,1108,1191,1216,1231,1238,1340
Soundesign	1014,1015
Sova	1254
Soyo	1159,1201,1223
Squareview	1160
SSS	1013
Starlite	1015
Studio Experience	1057
SunBriteTV	1150,1294
Superscan	1010,1066,1259
Supersonic	1202,1274
Supreme	1108

SVA	1021,1036,1042,1067,1069,1070,1071,1259
Sylvani	1001,1013,1021,1083,1115,1126,1146,1184,1225,1229,1243,1259,
Symphonic	1013,1015,1146,1231,1259
Syntax	1000,1096,1133,1176
Tandy	1010
Tatung	1093,1118,1119,1142,1204,1317
TCL	1311
Technic	1004,1017
Techview	1290
Techwood	1004
Teco	1087
Teknika	1003,1008,1009,1015,1083
Telefunken	1030
Thomas	1231
TMK	1014
TNCI	1001
Toshiba	1008,1012,1014,1023,1054,1058,1098,1112,1135,1140,1145,1147,1161,1181,1246,1250,1257,1266,1290,1323,1936,1338
Television	1003
TruTech	1184,1196,1269
TVS	1019
US Logic	1118
Vector Research	1001
Venturer	1226,1228
VEOS	1083
Victor	1004
Vidikron	1083,1147
Vidtech	1014
Viewsonic	1044,1065,1066,1078,1132,1144,1166,1170,1178,1198,1203,1215,1267,1271,1287
Viore	1103,1190,1222,1274,1303,1328
Vistron	1276
Vizio	1066,1078,1204,1206,1336
Wards	1001,1004,1008,1012,1014,1015,1054,1068,1083,1098,1108,1137,1054
Waycon	1054
Westinghouse	1018,1078,1081,1082,1105,1116,1124,1169,1194,1281,1288,1318
White Westinghouse	1019,1022

Wyse	1144
Yamaha	1001,1044
Zenith	1001,1004,1009,1011,1014,1019,1022,1097,1108,1144,1231,1234,1242,1290,1309,1333