


Front Panel Description

The front panel of your cable modem provides LED status indicators that indicate how well and at what state your cable modem is operating.

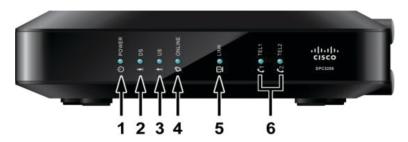

EPC3208

- 1 **POWER** ON, power is applied to the cable modem
- 2 DS ON, the cable modem is receiving data from the cable network
- 3 US-ON, the cable modem is sending data to the cable network
- **4 ONLINE**—ON, the cable modem is registered on the network and fully operational
- **5 LINK**—ON, the wireless access point is operational. Blinking indicates that data is being transferred over the wireless connection. OFF indicates that the wireless access point has been disabled by the user
- **6 TEL1**—ON indicates telephony service is enabled. Blinks when line 1 is in use. OFF indicates that phone service for TEL 1 is not enabled
 - **TEL2**—ON indicates telephony service is enabled. Blinks when line 2 is in use. OFF indicates that phone service for TEL 2 is not enabled
- **7 BATTERY (optional model only)**—ON indicates that the battery is charged. Blinking indicates that the battery charge is low. Off indicates that the unit is operating from battery power, that the battery charge is depleted, or the battery is defective or missing



How Do I Connect My Devices to Use the Internet?

You can use your residential gateway to access the Internet, and you can share that Internet connection with other Internet devices in your home or office. Sharing one connection among many devices is called networking.


Connect Devices to the Cable Modem

The following illustration shows all of the possible connections that can be made to your cable modem for various services.

Note: Professional installation may be available. Contact your local service provider for further assistance.

To connect devices

The following diagram illustrates one of the various networking options that are available to you.

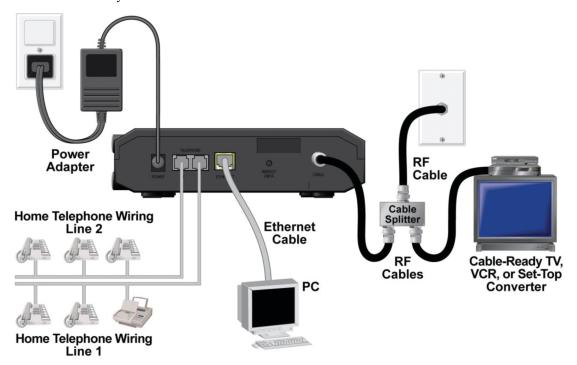

To Log in

- 1. Type http://192.168.0.1 in the address field of the browser.
- 2. When prompted to log in, type **Username**: admin & **Password**: admin.